

User Guide

4 Zone Dimming RF Remote Controller


Summary

- Apply to single color LED controller, dimming driver or smart lamp.
- Black or white version available.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- CR2032 button battery power supply.
- Operate with LED indicator light.

Technical parameter

- Output signal: RF(2.4GHz)
- Working voltage: 3VDC(CR2032)
- Working current: < 20mA
- Standby current: < 4 μ A
- Standby time: 12 months
- Remote distance: 30m
- Working temperature: -30 $^{\circ}$ C~55 $^{\circ}$ C
- Dimension: L135 \times W40 \times H11mm
- Weight: 41g

Key function

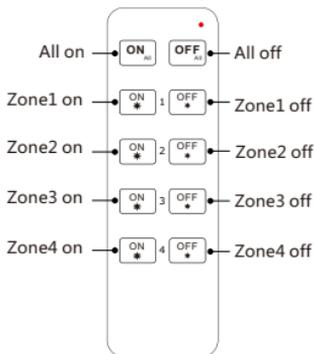

All on: Turn on all 4 zone light.

All off: Turn off all 4 zone light.


Zone 1-4 on:

Short press turn on zone light,
long press 1-5s continuous 256 levels increase brightness.

Zone 1-4 off:

Short press turn off zone light,
long press 1-5s continuous 256 levels decrease brightness.

Dimension

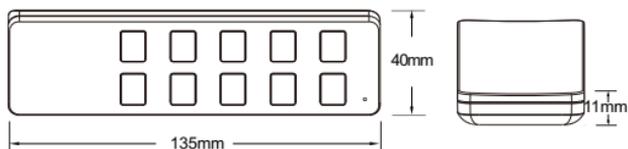

Operation

- Pull out the plastic battery barrier sheet from the battery compartment located on the bottom of the remote.

Match guide

Remote match with 2.4G RF controller, dimming driver, smart lamp and panel controller.

Match with controller(with match key)

1. Match: Short press match key, within 5s, press or zone on/off key of the remote.
2. Delete: Long press match key for 5s, delete all matched remote.

Match with controller(without match key), dimming driver or smart lamp

1. Match: Switch off the power, then switch on power again, short press zone on/off key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.
2. Delete: Switch off the power, then switch on power again, short press zone on/off key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.

Match with panel controller

1. Match: Turn on light, turn off, immediately press on/off key for 5s, within 5s, press zone on/off key of the remote.
2. Delete: Turn on light, turn off, immediately press on/off key for 10s, delete all matched remote.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.

User Guide

8 Zone Dimming RF Remote Controller


Summary

- Apply to single color LED controller, dimming driver or smart lamp.
- Black or white version available.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- CR2032 button battery power supply.
- Operate with LED indicator light.

Technical parameter

- Output signal: RF(2.4GHz)
- Working voltage: 3VDC(CR2032)
- Working current: < 20mA
- Standby current: < 4 μ A
- Standby time: 12 months
- Remote distance: 30m
- Working temperature: -30 $^{\circ}$ C~55 $^{\circ}$ C
- Dimension: L135 \times W40 \times H11mm
- Weight: 41g

Key function

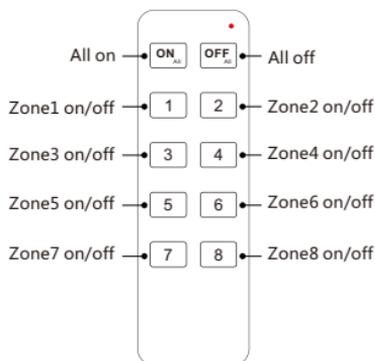


All on: Turn on all 8 zone light.

All off: Turn off all 8 zone light.

Zone 1-8 on/off: Short press turn on/off zone light, long press 1-5s increase or decrease brightness continuously.

Dimension

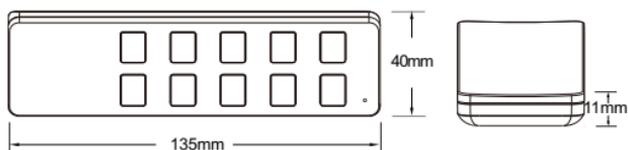

Operation

- Pull out the plastic battery barrier sheet from the battery compartment located on the bottom of the remote.

Match guide

Remote match with 2.4G RF controller, dimming driver, smart lamp and panel controller.

Match with controller(with match key)

1. Match: Short press match key, within 5s, press or zone on/off key of the remote.
2. Delete: Long press match key for 5s, delete all matched remote.

Match with controller(without match key), dimming driver or smart lamp

1. Match: Switch off the power, then switch on power again, short press zone on/off key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.
2. Delete: Switch off the power, then switch on power again, short press zone on/off key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.

Match with panel controller

1. Match: Turn on light, turn off, immediately press on/off key for 5s, within 5s, press zone on/off key of the remote.
2. Delete: Turn on light, turn off, immediately press on/off key for 10s, delete all matched remote.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.