MiBOXER® | Mi·Light Subordinate New Brand


DALI RGB+CCT Panel Remote

Model No.: B4-DL

Product Feature

- Use the MiBoxer NFC App to adjust parameters and DALI addresses
- When used with the DL-RF2, it enables control of all DALI devices on the line
- Supports the execution and saving of scenes
- Supports TC range setting
- dopt a high precision capacitive touch IC
- Magnetic installation
- 2.4G RF wireless transmission technology
- Control distance: 30m
- RGB, Brightness, color temperature adjustable


*Works in conjunction with DL-RF2

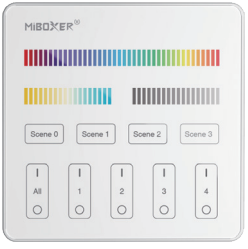


Product Parameter

Product Name:	DALI RGB+CCT Panel remote	Protocol:	2.4GHz RF
Model No.:	B4-DL	Modulation:	GFSK
Working voltage:	3V(AAA*2PCS)	Control Distance:	30M
Standby consumption:	20μA	Size:	86*86*15mm
Transmitting:	6dBm	Working temperature:	-10~40℃


Remote

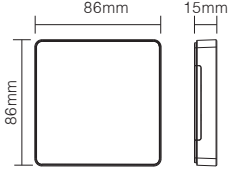

Remote Holder

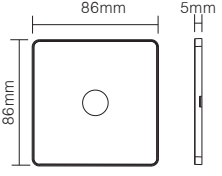

Function

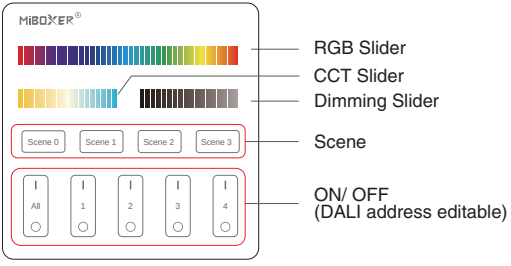

DALI address editable

MiBoxer NFC APP Download


1.Scan the QR code on the right to download the "MiBoxer NFC" APP.

2. Android system: Download from "Google store"
IOS system: Download from "Apple store"

MiBoxer NFC APP Setting

Locate the NFC icon on the remote control to read;
DALI address and Tc range & Color Type can be configured via the MiBoxer NFC APP




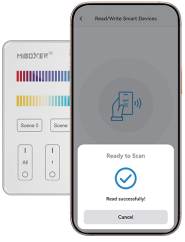








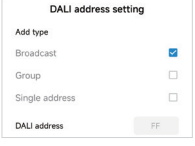

DALI address setting
Press the APP power button on the remote control to configure the DALI address.
Single address Range: 0-63
Group Range: 0-15

Configurable Tc range: 1200K~10000K
Default: 2700K~6500K



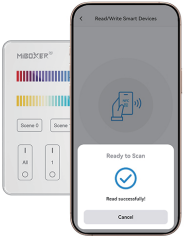




After configuration is complete, write data to the same position on the NFC tag where reading was performed to finish remote control setup.


2.4G RF Remote control instruction

Linking Code Instructions

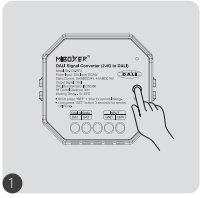


1

Short press DL-RF2 "SET" button once

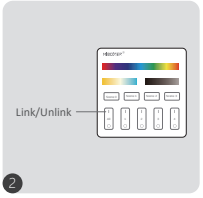

2

Short press " | " button 3 times within 3 seconds.

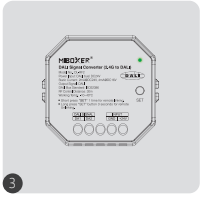


3

Indicator Light blink 3 times slowly means linking is done successfully.


Linking failed if Indicator light is not blinking slowly, Please follow above steps again.
(Note: Light that have linked can't link again)

Unlinking Code Instructions

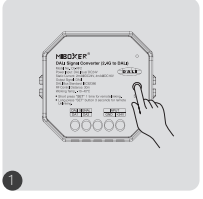


1

Short press DL-RF2 "SET" button once

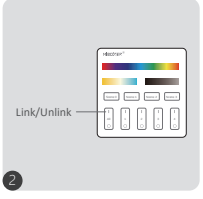

2

Short press " I " button 5 times within 3 seconds.

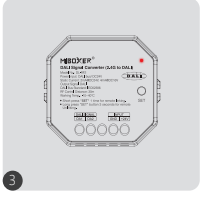


3


Indicator Light blink 10 times quickly means unlinking is done successfully.

Unlinking failed if Indicator light is not blinking quickly, Please follow above steps again.
(Note: Light haven't linked that don't need to unlink)


Installation

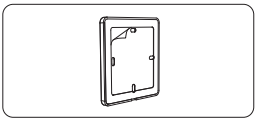


1. Tear out the back tape

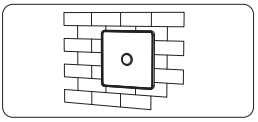

2. Stick the holder on the position where you want

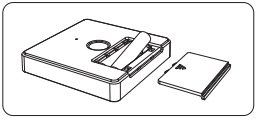

3. Install 2*AAA battery

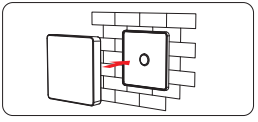

4. Put the rotating switch on the front of holder

Attention:

1. Works in conjunction with DL-RF2
2. Don't use it in humidity or high temperature area, please take out battery if don't use it frequently and keep it in dry or static electricity area
3. Don't use it near metal or strong magnetic area, it will affect signal and lost distance.

Made in China