


⚠ WARNING/CAUTION

- **DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.**
- **TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES. THE INSTALLATION AND MAINTENANCE OF THIS UNIT SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.**
- **REMOVE THE FIXTURE, PARTS AND PARTS BAG(S) FROM THE CARTON. BEFORE DISCARDING THE CARTON, DOUBLE CHECK TO MAKE CERTAIN THAT ALL PARTS ARE FOUND. INSPECT THE FIXTURE PRIOR TO INSTALLATION FOR ANY DAMAGE TO THE FIXTURE.**
- **DIMMING: THE FIXTURE CAN BE CONTROLLED BY A WALL DIMMING DEVICE. ONLY USE TRIAC/ELECTRONIC DIMMER. MAKE SURE THE CARTON IS MARKED FOR USE WITH LED COMPACT FLUORESCENT-INCANDESCENT LIGHT SOURCE ONLY. THESE CAN BE PROVIDED BY YOUR LOCAL ELECTRICAL DISTRIBUTOR, HOME CENTER, OR HARDWARE STORE.**
- **PLEASE CLEAN WITH A SOFT, DRY CLOTH ONLY! DO NOT USE CLEANSERS**

FIXTURE INSTALLATION

1. Attach the MOUNTING PLATE (A) to the wall using the supplied TOX (C) and TOX SCREW (B).
2. See the WIRING INSTALLATIONS PAGE for the wiring guide.
3. Once the wirings are done, peel the adhesive sticker on the back of the TERMINAL BLOCK (D) and paste it to the inside face of the backplate of the FIXTURE ASSEMBLY (G).
4. Attach the FIXTURE ASSEMBLY (G) to the MOUNTING PLATE (A) and secure using TOOTH WASHER (E) and FLATHEAD SCREW (F).
5. Attach the NYLON WASHER (J) and the GLASS (H) to the exposed thread of the GLASS FRAME (I). Attach another NYLON WASHER (J), then attach the glass assembly to the FIXTURE ASSEMBLY (G) and secure using ACORN NUT (K).
6. Install the BULB (L) into the SOCKET of the FIXTURE ASSEMBLY (G). THIS FIXTURE IS RATED FOR 40 WATT 220 VOLT LAMP. DO NOT EXCEED THE RECOMMENDED WATTAGE!
7. Restore power to the circuit breaker or fuse box.

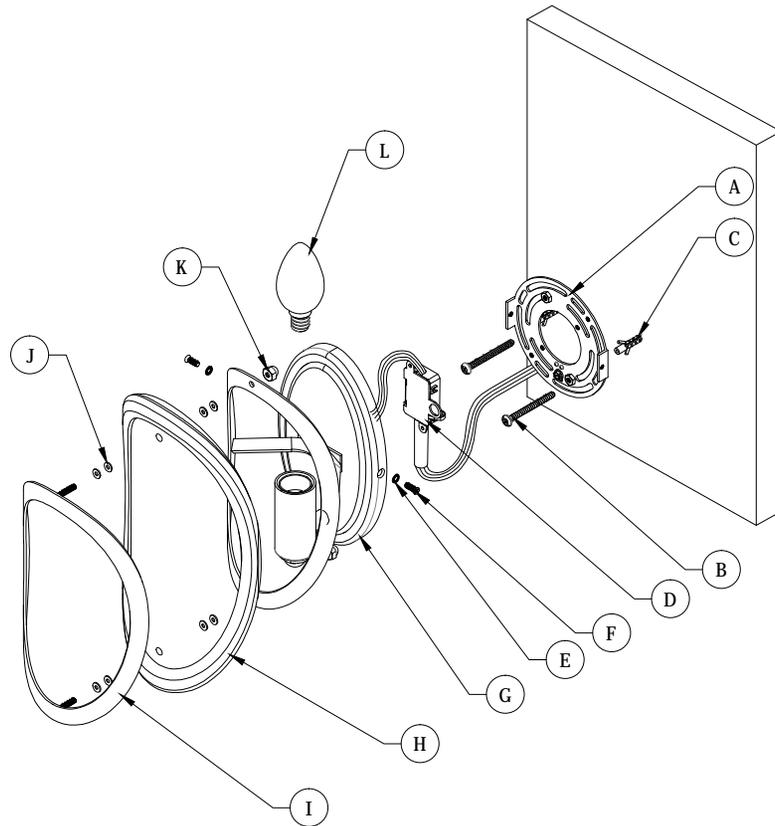


PART(S)	REPLACEMENT PART NAME	NUMBER
A,B,C,D	HARDWARE KIT	HDW-1501-CE
E	TOOTH WASHER	WAS-1501-CE-T
F	FLATHEAD SCREW	SCR-1501-CE
H	GLASS	GLS-1501-CE
I	GLASS FRAME	FRM-1501-CE
J	NYLON WASHER	WAS-1501-CE-N
K	ACORN NUT	NUT-1501-CE

Hudson Valley[®]

LIGHTING GROUP

HUDSON VALLEY LIGHTING TROY LIGHTING MITZI CORBETT LIGHTING

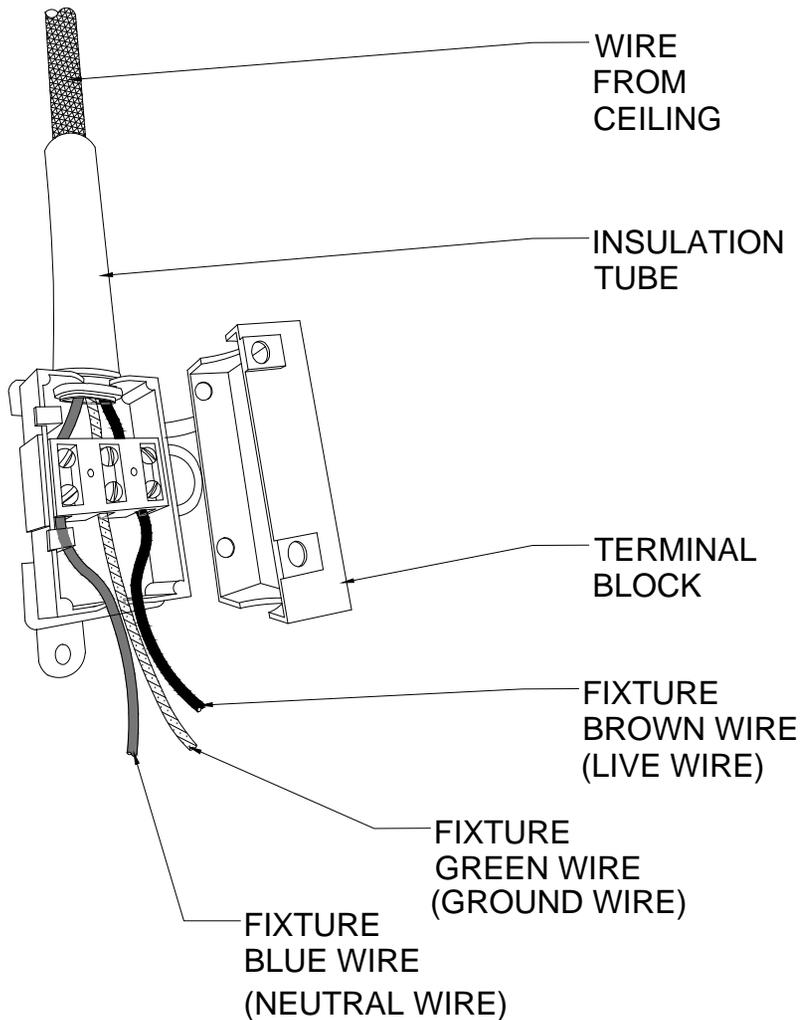

WIRING INSTALLATIONS

1. Open the terminal block.
2. Fasten the blue wire from the wall to the terminal block, run it through the insulation tube and align it to the fixture blue wire. **MAKE SURE THERE IS NO EXPOSED WIRE STRANDS THAT COULD CAUSE DANGEROUS SHORT CIRCUIT!**
3. Fasten the brown wire from the wall to the terminal block, run it through the insulation tube and align it to the fixture brown wire. **MAKE SURE THERE IS NO EXPOSED WIRE STRANDS THAT COULD CAUSE DANGEROUS SHORT CIRCUIT!**
4. Fasten the green wire from the wall to the terminal block, run it through the insulation tube and align it to the fixture green wire. **MAKE SURE THERE IS NO EXPOSED WIRE STRANDS THAT COULD CAUSE DANGEROUS SHORT CIRCUIT!**
5. Close the terminal block