MiBOXER® | Mi·Light Subordinate New Brand

DALI Color Temperature Remote

Model No.: C11-DL

Product Feature




- 2.4G RF wireless transmission technology
- Control distance: 30m
- Brightness, color temperature adjustable
- Supports control of DALI devices on the line
- Magnetic installation

*Requires MiBoxer DALI signal converter (DL-RF2 ...)


Product Parameter

Product Name:：	DALI CCT Remote	Protocol：	2.4GHz RF
Model No.:：	C11-DL	Modulation：	GFSK
Working voltage:	3V(AAA*2PCS)	Control Distance:	30M
Standby consumption:	20μA	Working temperature：	-10~40℃
Transmission：	6dBm	Certification：	CE、EMC、LVD、RED

Remote

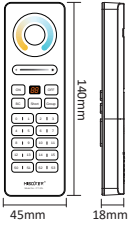

Remote Holder

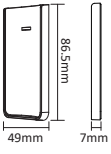

Function

Operation Steps

1. Select Device Address

① Unicast mode 00 ~ 63

briefly press the **Short** button to switch the base address (0/ 10/ 20/ 30/ 40/ 50/ 60).

00 10 20 30 40 50 60

The final unicast address =
Base address + Keypad number (0-9).

② Group mode E0 ~ EF


briefly press the **Group** button to switch to group mode. The final group address = Keypad number (0-15).

③ Broadcast mode FF

briefly press the **BC** button to switch to broadcast mode.

2. Control Device

ON/OFF, Color Temperature, Brightness

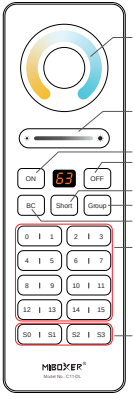

CCT Ring

Brightness Dimming

OFF

ON

① Unicast

② Group

③ Broadcast

Select Button

Scenes mode: S0~S3

Short press: Activate scene

Long press 3 seconds: Save the current lighting state/ (the light flashes one time slowly once completed successfully).

Color Temperature Setting



Press and hold the warm end of the color temperature bar for 5 seconds until the display flashes, then set the minimum CCT value (adjustable range: 1800K ~ 4500K).

27 The display will show the currently set value.



Press and hold the cool white end of the color temperature bar for 5 seconds until the display flashes, then set the maximum CCT value (adjustable range: 4500K ~ 9900K).

65 The display will show the currently set value.

*In setup mode, briefly press the “ON” button to increase the value, and briefly press the “OFF” button to decrease the value.
Press and hold the “ON or OFF” button to quickly increase or decrease the value.

Exit setup mode if no operation occurs within 5 seconds, or by pressing any other key.

Link/Unlink

Link



Short press DL-RF2 "SET" button once



Short press “ON” 3 times within 3 seconds



Link is done once light flashes 3 times slowly

Link is failed if light doesn’t flash, please repeat above steps
（Attention: can not link again if remote already finished linking）

Unlink



Short press DL-RF2 "SET" button once




Short press “ON” 5 times within 3 seconds




Link is done once light flashes 10 times quickly

Unlink is faild if light doesn’t flash, please repeat above steps
（Attention: no need to unlink if the light never be linked）

Installation

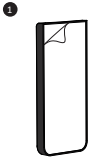

Remove the sticker on the holder

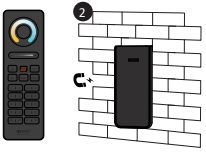

Stick the holder on the wall and put remote on the holder

Attention:

1. This remote control works with MiBoxer DALI series signal converters. For compatibility information, please refer to the product manual.
2. This remote control is a precision electronic product. Do not use it in humid or high-temperature environments for extended periods. Remove the batteries if it will not be used for a long time, and store it in a dry, static-free environment.
3. Do not operate the remote control in areas with large metal structures or near strong electromagnetic fields, as this will significantly reduce the control range.

Made in China